LE·VIVI

IMPORTANT


Read all instructions carefully before starting the installation.

This will ensure you obtain the best possible results.

Cabris Shower

Installation instructions

NL2142AUNZ

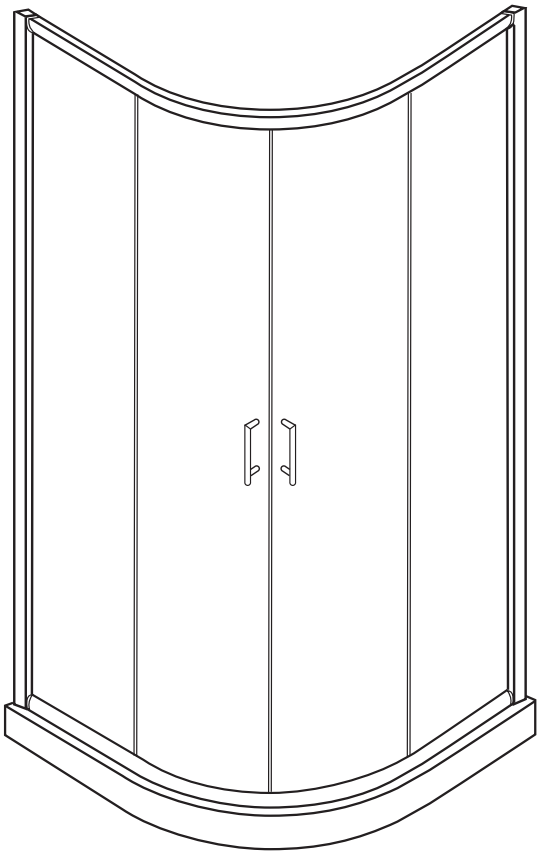

TOOLS REQUIRED

- Level
- Tape
- Pencil
- Ruler
- Drill & 3.2mm drill bit
- Caulking gun
- Phillips Screwdriver

SEALANT REQUIRED TO COMPLETE THIS INSTALLATION
(Refer wall fitting instructions)

SILASEAL PLUS (WHITE) to seal the WHITE shower door and returns to the shower tray.
– USAGE: 1 cartridge per shower

SILASEAL N (CLEAR) to seal the polished shower door and returns to the shower tray
– USAGE: 1 cartridge per shower

GENERAL INFORMATION

Please inspect the product immediately upon receipt for transit damage, missing packs/ parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass
Note: Safety glass cannot be re-worked.
Please read these instructions carefully before start of installation.
Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
Note: This product is heavy and may require two people to install.

AFTERCARE INSTRUCTIONS
After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should NOT be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers. Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question. Please keep these instructions for aftercare and customer service details.

CLEANING AND MAINTENANCE INSTRUCTIONS

Acrylic surfaces

To clean acrylic surfaces use non abrasive soap and water.

Wipe out the unit after each use to prevent a build-up of soap and scum.

Glass

Glass is porous and this provides an ideal surface for shower grime to adhere, causing permanent staining.

Use a squeegee or dry towel, to dry the glass after use.

Aluminium extrusions

Regularly wash down extrusions with warm water and mild soap solution to prevent grime build up.

Grime build up retains contaminated moisture permitting attack of the surface thereby damaging the finish.

Where greasy deposits are concerned, cleaning may require a soft cloth dipped in white spirits.










Thoroughly rinse with water after cleaning, especially where crevices are present to ensure removal of all residues.

IMPORTANT


ALWAYS READ THE LABEL INSTRUCTIONS ON ANY CLEANING PRODUCTS BEFORE USE

DO NOT USE:
• Abrasive cleaners • Solvent based cleaners • Acetone or alcohol • Acid or alkaline cleaners • Harsh chemicals and disinfectants • Products containing ammonia or peroxide

BOX CONTENTS

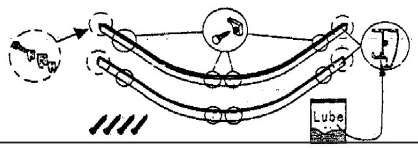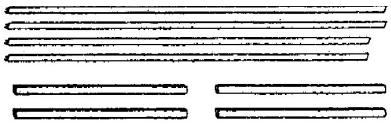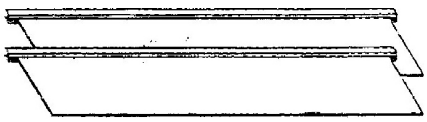1	(x2) Horizontal Rails (x4) Round Screws M4x35 (x1) Lube			
2	(x1) Installation Instruction			
3	(x2) Handle Sets			
4	(x4) Profile Covers			
5	(x4) Bumper Blocks (x4) Screws M4x12			
6	(x6) Wall Plugs (x6) Flat Screws M4x35			
7	(x8) Screws M4x8 (x8) Screw Cover Caps			
8	(x4) Water Deflectors (x4) Deflectors			
9	(x2) Magnetic Seals			
10	(x2) Wall Posts			
11	(x2) Fixed Panels			
12	(x2) Door Panels			

ASSEMBLY DRAWING

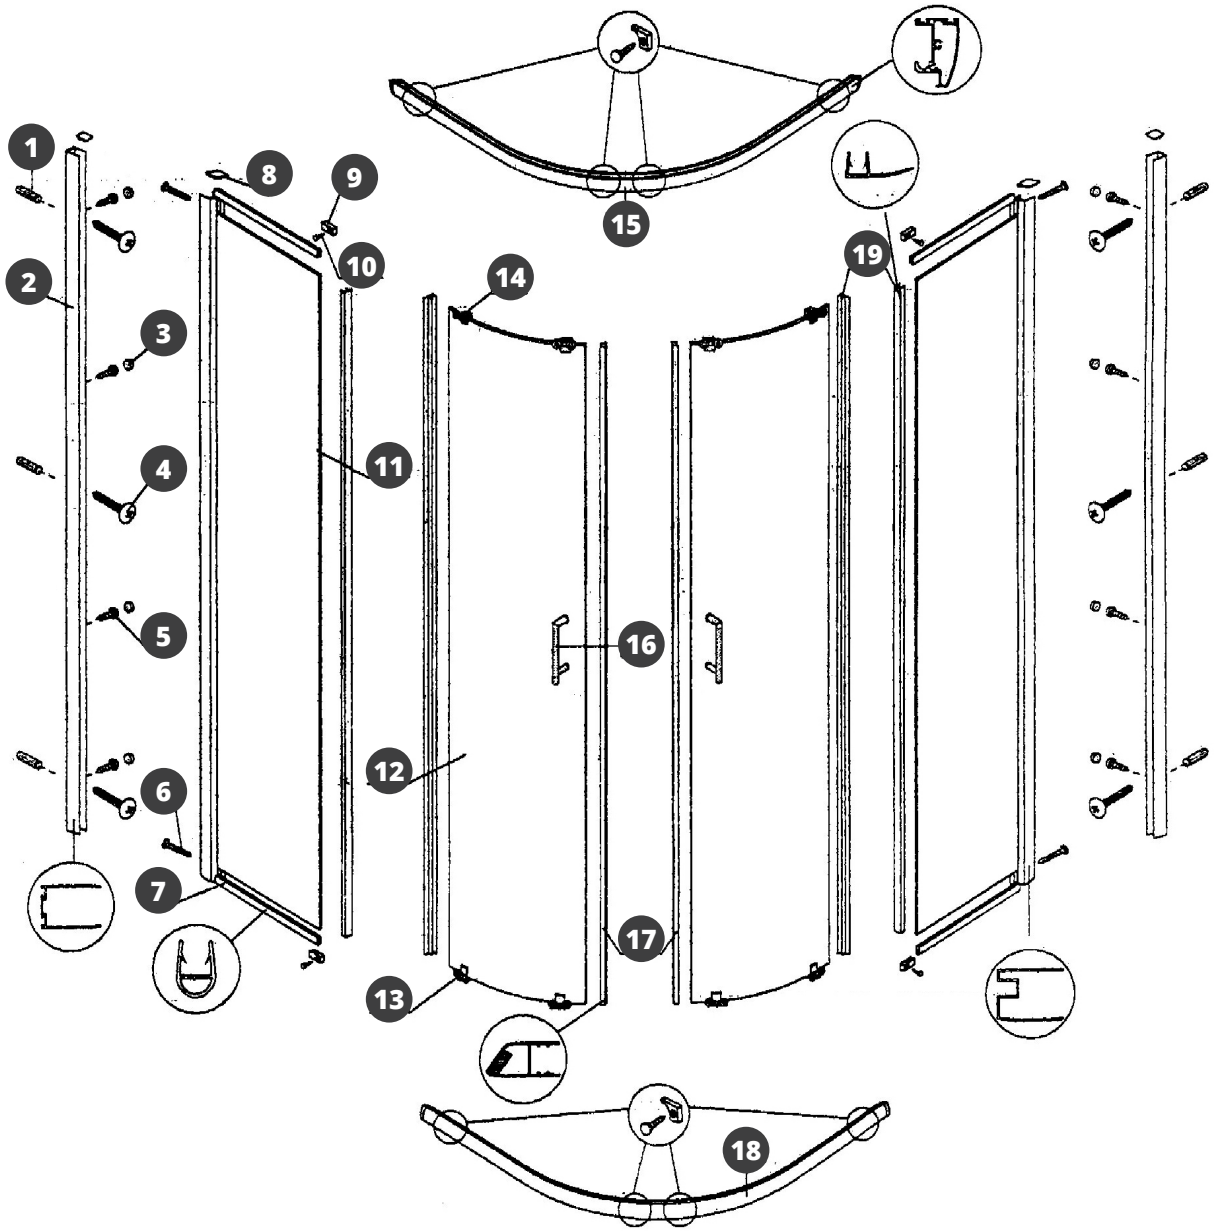



1	(x6) Wall Plugs	11	(x2) Fixed Panels
2	(x2) Wall Posts	12	(x2) Door Panels
3	(x8) Screw Cover Caps	13	(x4) Bottom Hooks
4	(x6) Flat Screws M4x35	14	(x4) Top Rollers
5	(x8) Screws M4x8	15	(x1) Top Horizontal Rail
6	(x4) Round Screws M4x35	16	(x2) Handle Sets
7	(x4) Deflectors	17	(x2) Magnetic Seals
8	(x4) Profile Covers	18	(x1) Bottom Horizontal Rail
9	(x4) Bumper Blocks	19	(x4) Water Deflectors
10	(x4) Screws M4x12		

INSTALLATION STEPS


STEP 1 Shower base MUST be installed level.

1. Position wall retainer posts against shower walls, resting on the shower base sill. Position post 15mm from edge—if wall is not plumb, recommend 20mm from edge.

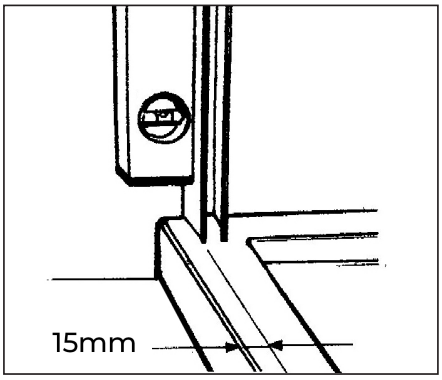

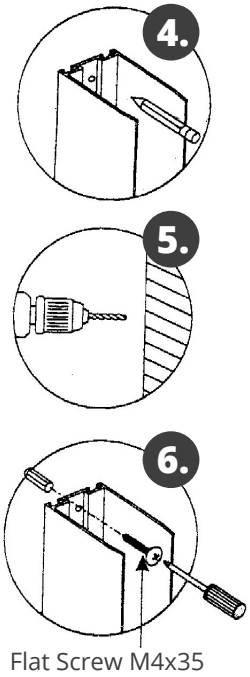

Flat Screw M4x35

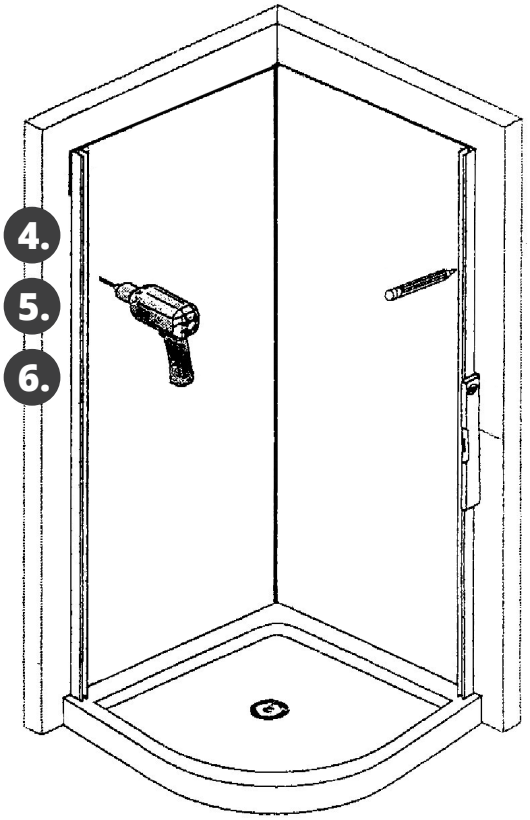


2. Check vertical with spirit level and mark fixing holes. Drill holes as required.

3. Fix both wall posts in place using the 6 long screws. Make sure the screws go into studs. **Note:** If Screwing into backing board only, use appropriate wall anchors on the wall.

CAUTION!

Before drilling holes, ensure there are no electrical cables or water pipes behind walls.

We recommend fixing the wall retainers by screwing through the backing board and into studs. Other methods may cause warping and might void warranty.

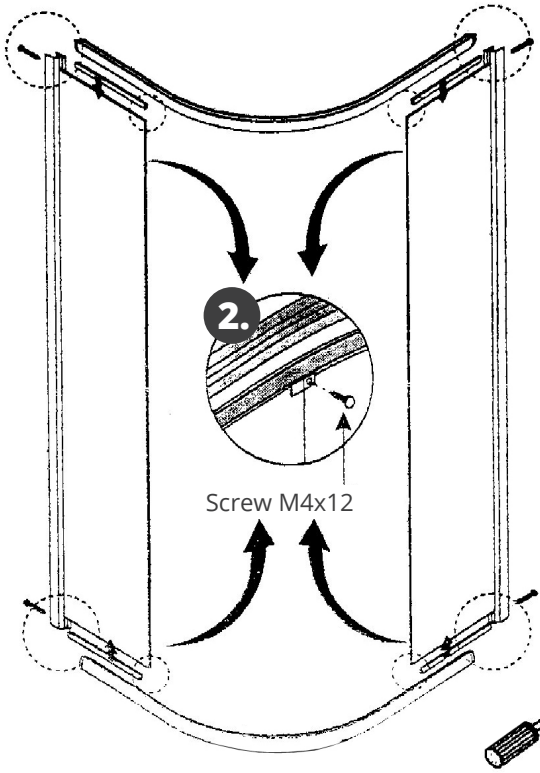


Screw M4x12


STEP 2 (This may require two people)

1. Firmly push deflectors onto glass top & bottom, making sure end is hard back against aluminium frame.

2. Install bumper blocks on ends of glass and screw to top and bottom horizontal rails.

3. Place top and bottom rail onto fixed panels and screw through ends.

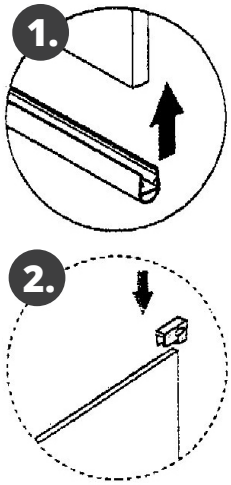

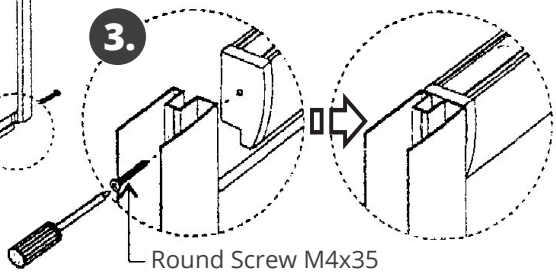


Round Screw M4x35

STEP 3

(This may require two people)


Install unit onto tray-positioning. The unit over the wall retainers. Once in place adjust so the gap is even around front of tray by pushing in or pulling out.

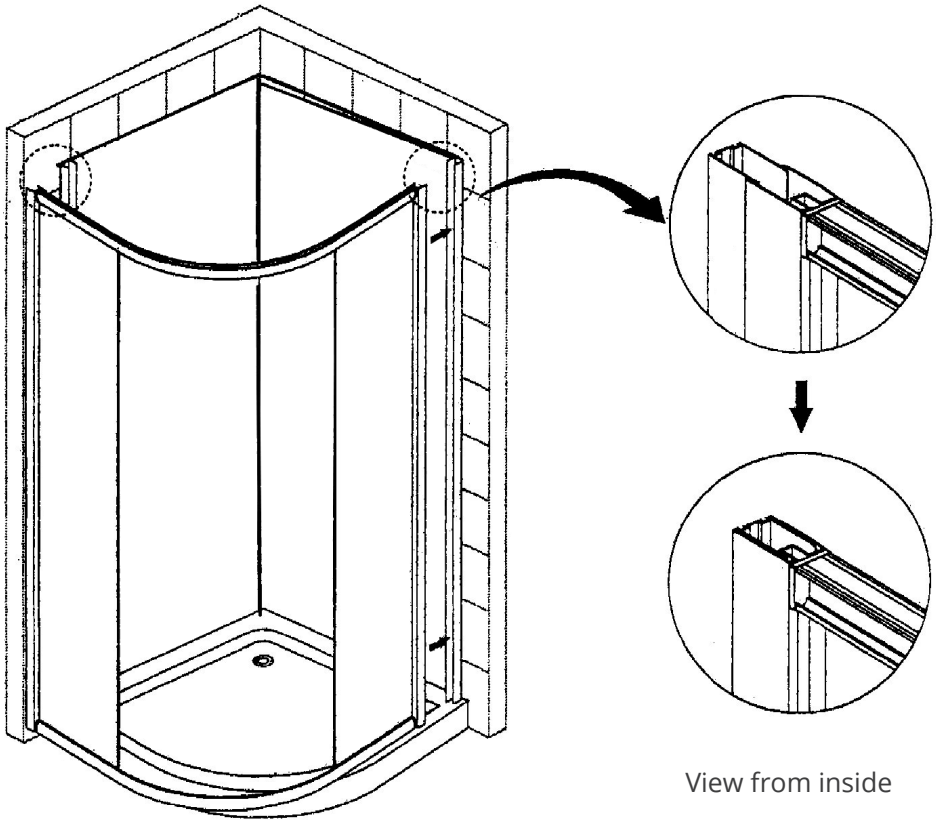


View from inside

STEP 4


Lift doors into place and position wheels in the top track.

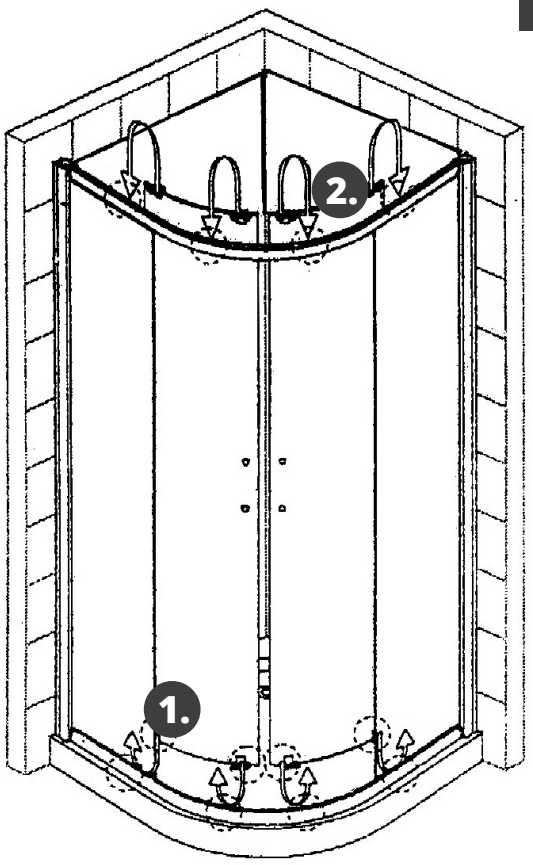

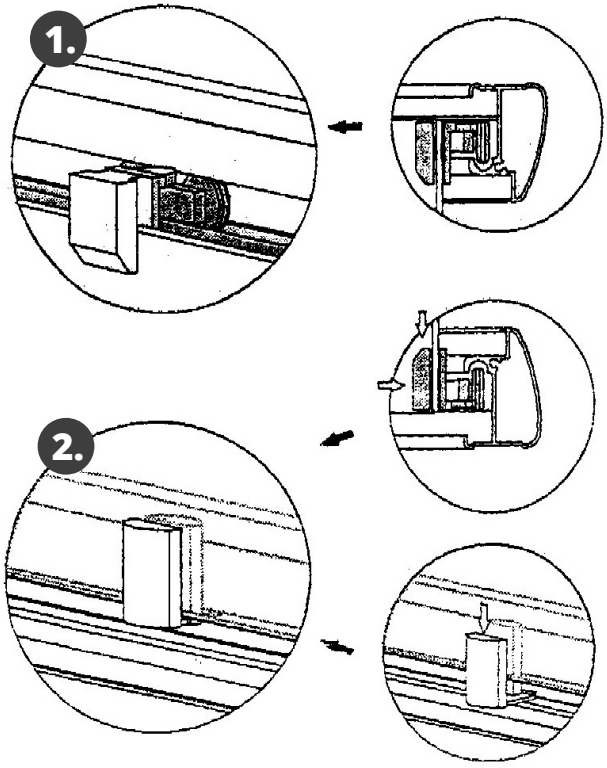



Push button hooks down so wheels engage into bottom rail. This is also how you release doors for cleaning.

STEP 5

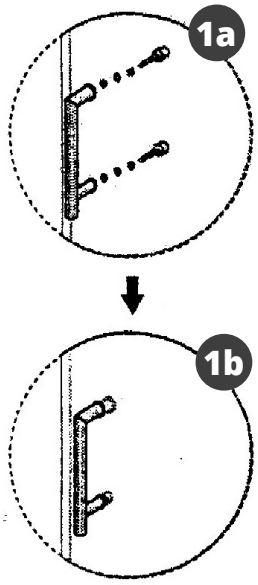


Fit handles onto glass as shown (knobs on inside).

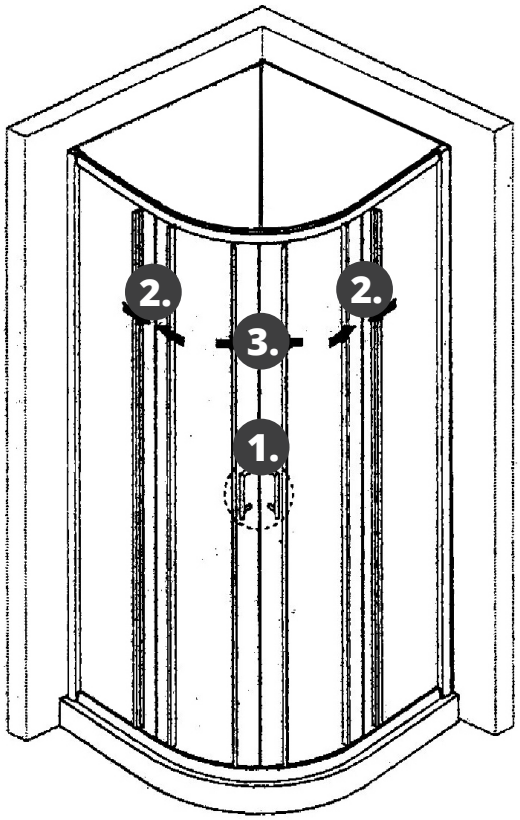


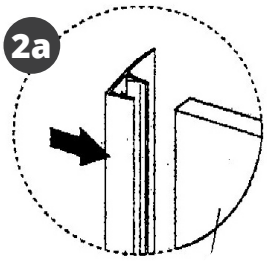

Fixed Panel
Fit water deflector to both fixed panels.

Door Panel
Fit water deflector to inside of both door panels.

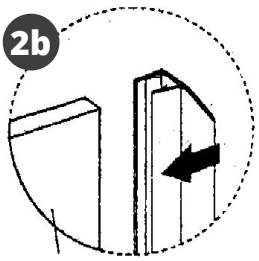


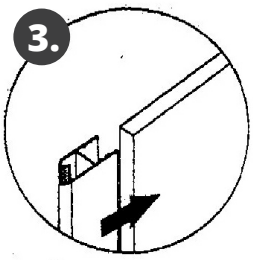


Fit magnetic seals to door ends closest to handles

CAUTION! Ensure wall profiles are plumb. Adjust enclosure to be square and level. Wheels should be adjusted to square the doors and ensure smooth running.


STEP 6

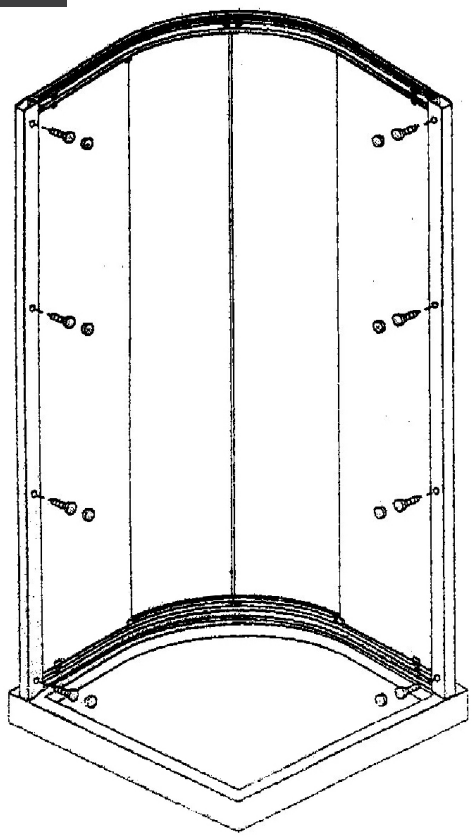


View from Inside

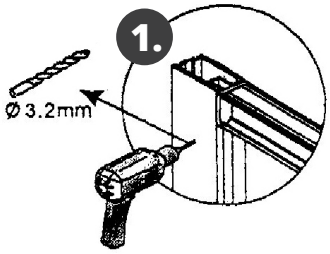

Drill holes as shown on inside of shower.

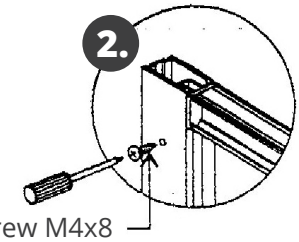



Fix screws as shown

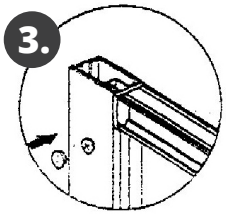

Cover screws with supplied caps

STEP 7

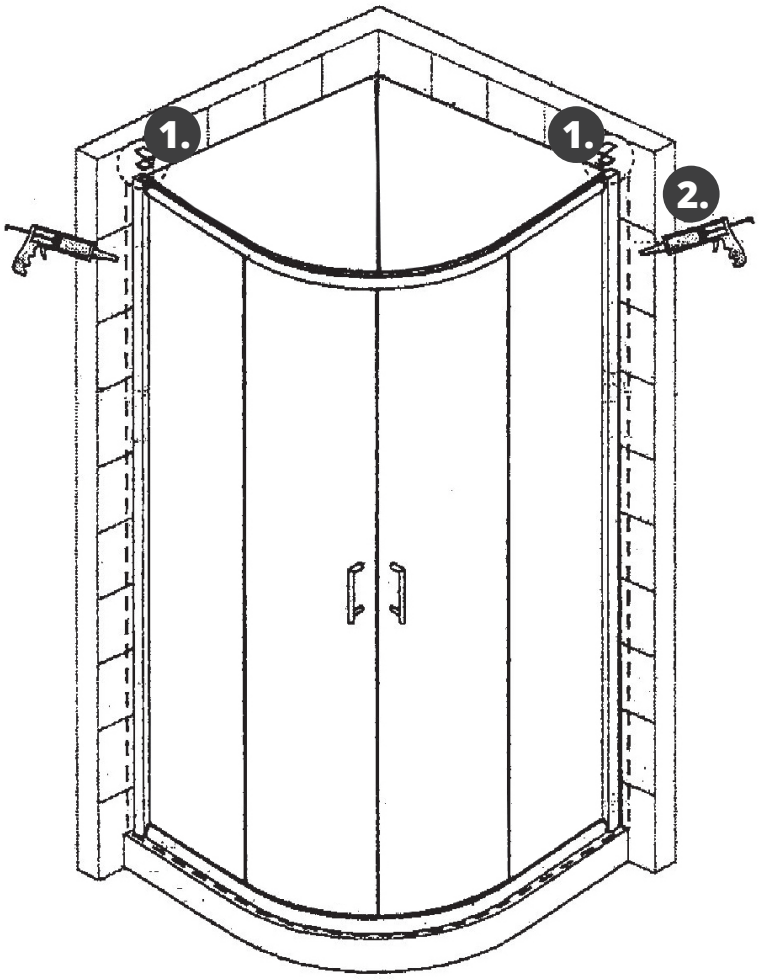

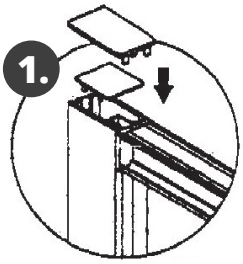





1. Fit profile covers as shown.

2. Seal all outside joints. This includes wall posts to walls, and fixed panels to wall posts, also seal horizontal rail to the tray with silicone supplied as per dotted line drawing.
(Do NOT seal on inside of shower).

- **A.** (Clear) Polished.
- **B.** (White) White powder coated finish.
- **C.** The surface of the sealant can be smoothed (before surface dries) by using a gloved finger dipped in a mixture of washing liquid and water.
- **D.** Excess sealant should be removed immediately with a damp cloth.

3. Allow 24 hrs for silicone to set before use.

PLEASE REFER TO CLEANING INSTRUCTIONS ON PAGE 2